







(IN) USER MANUAL




HIPPOCRATES SHELF AND DRAWER MOUNTING

Code 399004

Original instructions v2 (06/2023)

Tel: +385 42 683 373 E-mail: info@bloom.eu Web: www.bloom.eu


Bloom Technologies d.o.o. Gospodarska 3 42202 Trnovec Hrvatska / Croatia







Title	Page
1. Appendix 3 - Shelf mounting instruction	3
2. Appendix 4 - Drawer mounting instruction	5








Set components

No.	Name
1	Inox rack
2	Screw M4 x 12 A2
3	lnox holder
4	Inox shelf

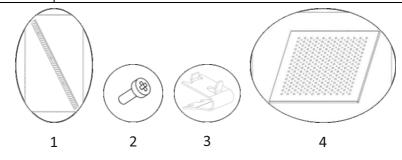

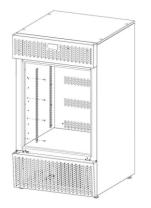


Figure 1. Mounting of inox rack

Step 1.

Unpack set from boxes. Take out inox rack and screw M4 x 12.

Screw it to the inside of the cabinet. (Figure 1.)


HIPPOCRATES 100 - Inox rack; 535 mm

HIPPOCRATES 250 - Inox rack; 1000 mm

HIPPOCRATES 400 - Inox rack; 1500 mm






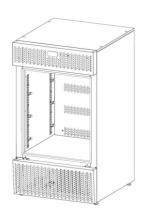

Step 2.

Mount inox holders on inox rack. Use 4 holders per shelf.

Figure 2. Mounting of inox holders

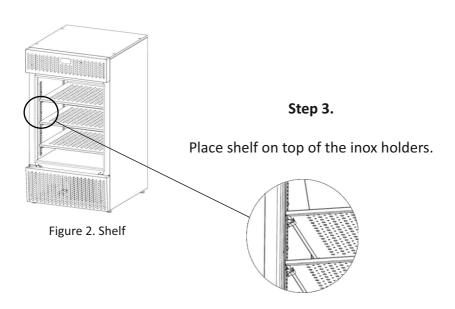








Set components

No.	Name	Quantity
1	lnox drawer	1
2	Screw M4 x 10 A2	8
3	Slide bracket (left/right)	2
4	Slide set (left/right)	2
5	Screw M4 x 10 A2	14
6	Drawer organizer set	1

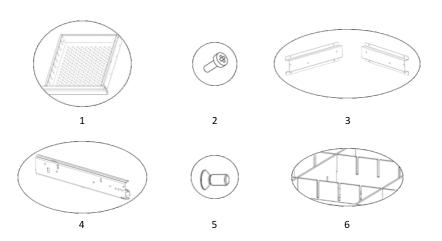





Step 1.

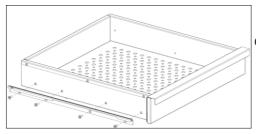


Figure 1. Mounting of drawer profile

Unpack set from boxes. Take out inox drawer, slide sets and number 5 screw M4 x 10 A2. Mount drawer profile on the sides of the drawer.

IMPORTANT: Slide set contains mirrored left and right slide!

Step 2.

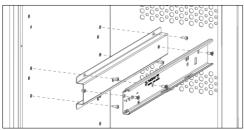


Figure 2. Mounting of side bracket

Mount slide brackets to the other side of the cabinet. Use number 2 screw M4 x 10 A2 to tighten bracket to the side. Use number 5 screw M4 x 10 A2 to mount slide profile onto brackets.

> IMPORTANT: Slide set contains mirrored left and right slide!

Step 3.

Insert middle profile and push it till the stop [slide insertion instructions on next page]. Mount drawer set to the slides. Use drawer organizer set to organize drawer to up to 9 smaller compartments.

> **IMPORTANT: Slide set contains** mirrored left and right slide!

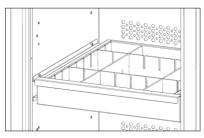


Figure 3. Drawer



Appendix 4 - Drawer mounting instruction



